



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-120V-500VA-80V

Primary Volts	Connect Lines To
120	0-1

Secondary Volts	Connect Lines To
80	11-12