



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-PML-R7-1P-GMA-50KVA-SZ-LT-DF-A6-BB-CZ-2B4-M1

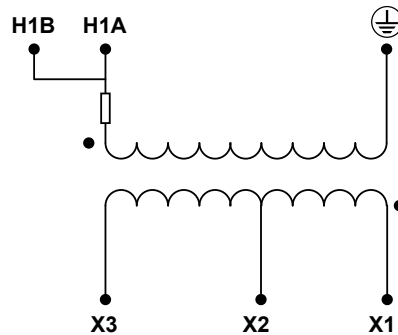

PRIMARY VOLTS	
CONNECT LINES TO H1A, H1B	
TAP	VOLTAGE
1	20928
2	20418
3	19920
4	19422
5	18936
SECONDARY VOLTS	
CONNECT LINES	VOLTAGE
X1, X3	240
X1, X2 - X2, X3	120

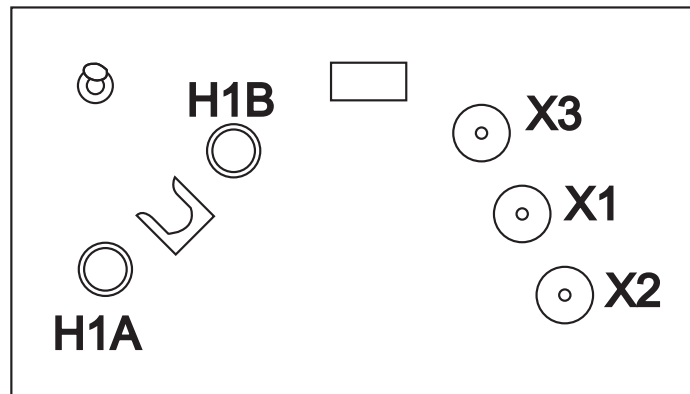

Wiring Diagram

MT-PML-R7-1P-GMA-50KVA-SZ-LT-DF-A6-BB-CZ-2B4-M1

