


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-600V-1KVA-120V

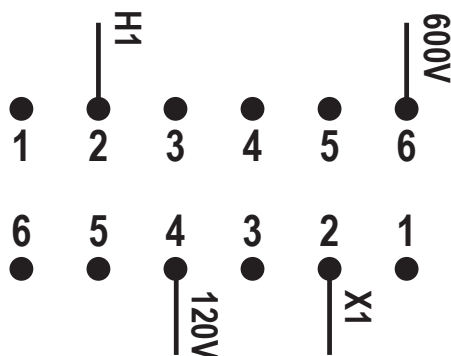

Input: 600V (Connect 2-6)
Output: 120V (Connect 4-2)