



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-PML-R48-1P-GMQ-167KVA-SZ-LT-DF-Z6-BB-CZ-1BZ-M1

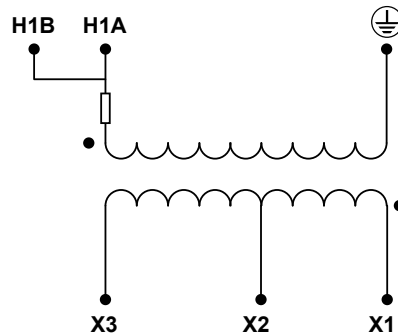

PRIMARY VOLTS	
CONNECT LINES TO H1A, H1B	
TAP	VOLTAGE
X	XXX
X	XXX
1	7620
X	XXX
X	XXX
SECONDARY VOLTS	
CONNECT LINES	VOLTAGE
X1, X3	240
X1, X2 - X2, X3	120

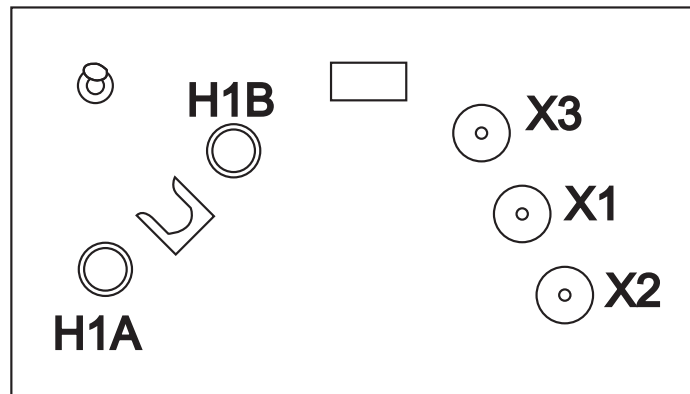

Wiring Diagram

MT-PML-R48-1P-GMQ-167KVA-SZ-LT-DF-Z6-BB-CZ-1BZ-M1

