



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-120V-300VA-208V

INPUT VOLTS

120V - CONNECT LINES TO X2-X1

OUTPUT VOLTS

208V - CONNECT LINES TO 0-208

220V - CONNECT LINES TO 0-220

240V - CONNECT LINES TO 0-240