


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-115.230V-25VA-12V

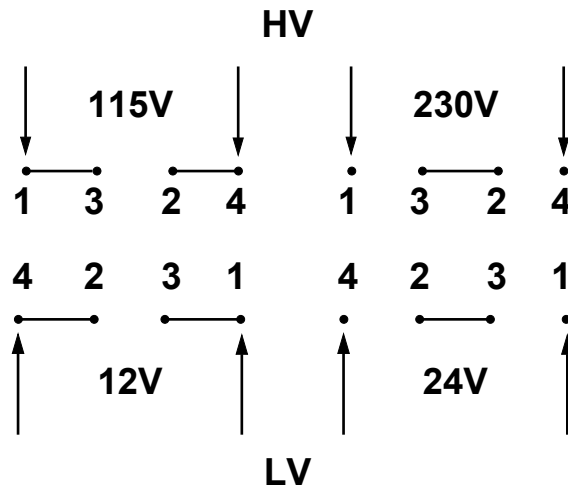

High Voltage (HV) (INPUT)	Install Jumpers Between Terminals	Lines Connect to
230V	3-2	1, 4
115V	1-3, 2-4	1, 4
Low Voltage (LV) (OUTPUT)	Install Jumpers Between Terminals	Lines Connect to
24V	3-2	1, 4
12V	1-3, 2-4	1, 4