


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-3P-400Y-45KVA-480D-50HZ-N3R-M1

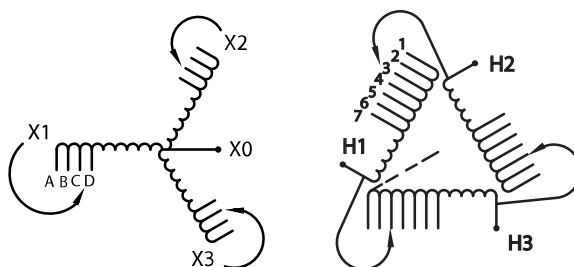

PRIMARY VOLTS	
CONNECT LINES	VOLTAGE
X1-C, X2-C, X3-C	400
X0-X1, X0-X2, X0-X3	231

SECONDARY VOLTS	
CONNECT LINES TO H1, H2, H3	
TAP#	VOLTAGE
1	504
2	492
3	480
4	468
5	456
6	444
7	432