


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-575V-1KVA-480V

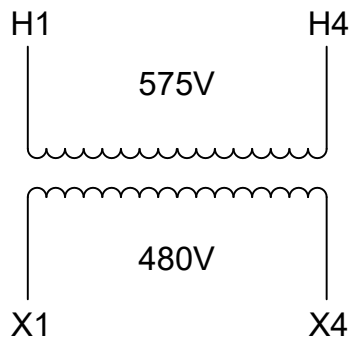

Connections

Primary Volts	Primary Lines Connect To
575	H1 - H4
Secondary Volts	Secondary Lines Connect To
480	X1 - X4