


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MMT-480V-100VA-48V

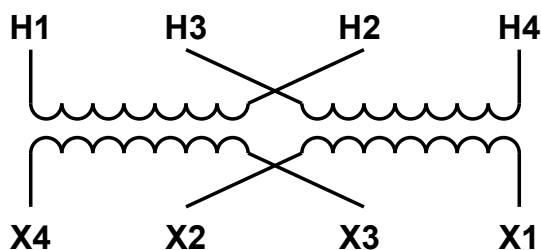

Primary Volts	Connect Lines To	Interconnect
480	H1-H4	H3-H2
240	H1-H4	H2-H4, H3-H1

Secondary Volts	Connect Lines To	Interconnect
48	X1-X4	X3-X2
24	X1-X4	X2-X4, X3-X1