



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CPT-4160V-3KVA-120V

Primary Volts	Connect Lines To
4160	H1-H2

Secondary Volts	Connect Lines To	Interconnect
240	X1-X4	X2-X3
120	X1-X4	X1-X3, X2-X4
120/240	X1-X2-X4	X2-X3