


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-575V-1KVA-120V

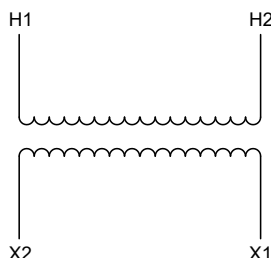

Connections

Primary Volts	Primary Lines Connect To
575	H1-H2
Secondary Volts	Secondary Lines Connect To
120	X2-X1