



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-120.208.240V-40VA-24V

INPUT:

120V (H1-H2)

208V (H1-H3)

240V (H1-H4)

OUTPUT:

24V (X1-X2)