



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-690V-500VA-120.240V

H1

H4

INPUT:
690V (H1-H4)

OUTPUT:
120V (X1/X2-X3/X4)
240V (X1-X2/X3-X4)

X1

X2

X3

X4