


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-120V-100VA-4V

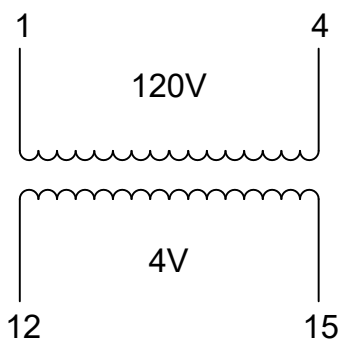

Connections

Primary Volts	Primary Lines Connect To
120	1-4
Secondary Volts	Secondary Lines Connect To
4	12-15