


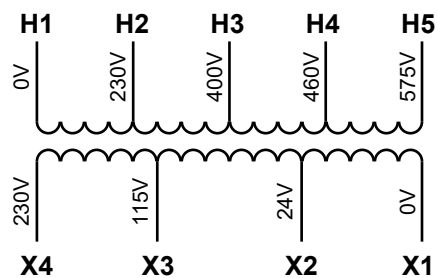

Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-400V-5KVA-230V



INPUT VOLTAGE

400V CONNECT: H1-H3

OUTPUT VOLTAGE

230V CONNECT X1-X4