



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-120V-300VA-48V

H1**H2****H3****H4**

INPUT:
120V (H1-H2,H3-H4)

OUTPUT:
0-48V
(X1-X3)

X1**X2****X3****X4**