



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-FP-1P-120V-2KVA-132V-N3R

Primary Volts	Connect Lines To	BRIDGING
120	H1-H2	5-6

Secondary Volts	Connect Lines To
132	X1-X2