



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-DX-3P-480D-100KVA-600Y.347-N3R

PRIMARY VOLTS	
CONNECT LINES	VOLTAGE
X1, X2, X3	480

SECONDARY VOLTS	
CONNECT LINES	VOLTAGE
H1, H2, H3 (BRIDGING 1-4)	600
H0-H1, H0-H2, H0-H3	347