Larson Electronics LLC **www.LarsonElectronics.com** **sales@larsonelectronics.com**
9419 E US HWY 175, Kemp, TX 75143 - P: (800) 369-6671 - F: (903) 498-3364

WAL-DL-60LED-M-GCR50

CAUTION

- To reduce the risk of electric shock and fire – Pull plug when servicing the cord reel.
- DO NOT use this cord reel in explosive atmospheres, near flammable liquids, or where explosion proof lamps are required.
- DO NOT use in the proximity of vehicles or equipment when there is a risk of flammable liquids coming into contact with the hand lamp.
- DO NOT immerse in water.
- DO NOT use in areas where water can accumulate or in rain or mist
- Risk of electric shock – For light duty dry location use only.
- General use cord reel only. Not for hard use. For indoor and dry location use only.
- Not approved for use in hazardous locations
- Do not use in hazardous locations as required by the Canadian Electrical Code, Part 1

Important Safety Instructions

This product has a 3 prong polarized plug on the power cord. Do not attempt to bypass this safety feature by removing the round plug and defeat this safety feature. This plug will fit into a grounded outlet only one way. If the plug does not if fully into the outlet, contact a qualified electrician. Never use with a two wire extension cord.

CAUTION: Pull out cord to full length when using receptacle.
CAUTION: Do not allow the cord to retract by itself as damage or injury may occur from excessive rewind speed.
CAUTION: Drywall will not hold the weight of the reel assembly.
CAUTION: Read and understand mounting instructions before attempting installation and use of this product.

OPERATION

To operate, plug into a 120 volt, 60 Hz outlet. The work light has a two position rocker switch to activate the floodlight or turn it off.

FEATURES


- The cord is 50’ long; 18/2 SVT cord with polarized 3 prong plug.
- The magnetic hook can be attached at either the top of the light or on the side.
- The magnets can also be used to pick up small steel objects.
- Adjustable cord-stop

Larson Electronics LLC www.LarsonElectronics.com sales@larsonelectronics.com
9419 E US HWY 175, Kemp, TX 75143 - P: (800) 369-6671 - F: (903) 498-3364

MOUNTING

Ceiling or Wall Installation

1. Select a location within 2 feet of an electrical outlet. The outlet for a garage door opener is desirable.
2. Drywall will not hold the weight of the reel assembly, so locate a ceiling joist or wall stud and using the mounting bracket as a template, mark the holes so they are centered on the ceiling joist or stud.
3. Attach the mounting bracket to the stud using the 2 wood screws provided.
4. Align the holes on the side of the reel with the holes in the side of the mounting bracket and insert the pin.
5. Place the retaining ring on the pin and twist until the entire ring is through the hole in the pin. DO NOT operate this reel without the retaining ring in place on the pin.

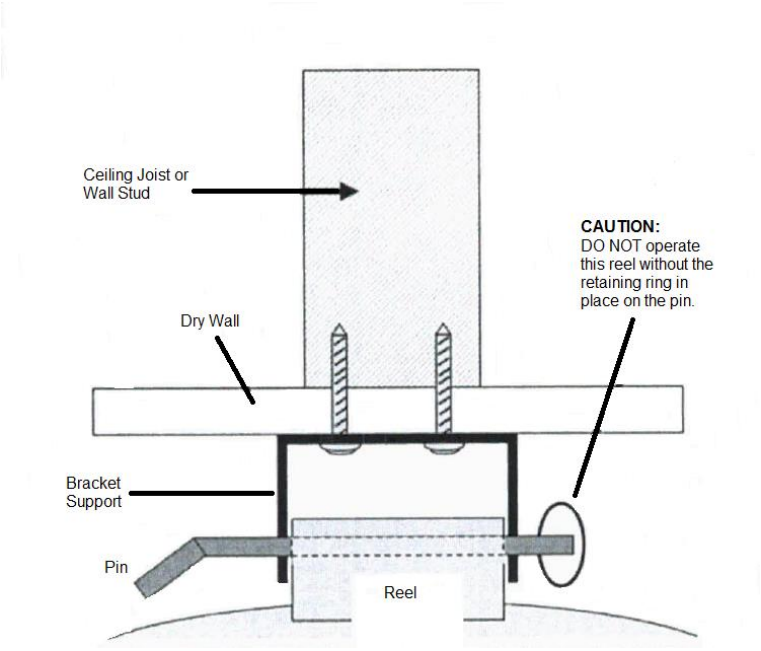

SAFETY / CARE

REEL

- Caution: Do not allow the cord to retract by itself as damage or injury may occur from excessive rewind speed.
- Adjust the cord stop to hold the receptacle at the desired length when the cord is retracted.
- Before cleaning the reel, always unplug from the power source.

- Clean the outside of the cord reel only. Use a soft cloth with mild detergent. Do not use petroleum based to clean the cord reel. Never immerse the cord reel or receptacles or work lights in water. Dry thoroughly before attempting to reattach to power source.

LED WORK LIGHT

CAUTION: Bright LED radiation. Avoid direct eye exposure. The light is a Class 2 LED product per IEC 60825-1 Edition 1.2.2001.

- Do not use this work light in explosive or hazardous areas.
- Do not attempt to repair or disassemble the work light. There are no user replaceable parts fro this work light.