
FTL-2-CFL-X12V

CAUTION

1. Inspect cord regularly for damage and replace if necessary for user safety
2. Do not submerge in liquids.
3. When hanging reel models on ceiling:
   - By hook: Close hook with pliers to prevent reel from coming down.
   - By bracket pin: With reel in place, bend end of "L" shaped pin to prevent pin from falling out.
   - Read mounting instructions carefully before installing.
4. Used in covered areas out of rain and weather.
5. Tool tap models:
   - Do not exceed Tool Tap amperage rating of 12 amps (16 AWG).
   - Pull cord all the way out of reel when using the tool tap.

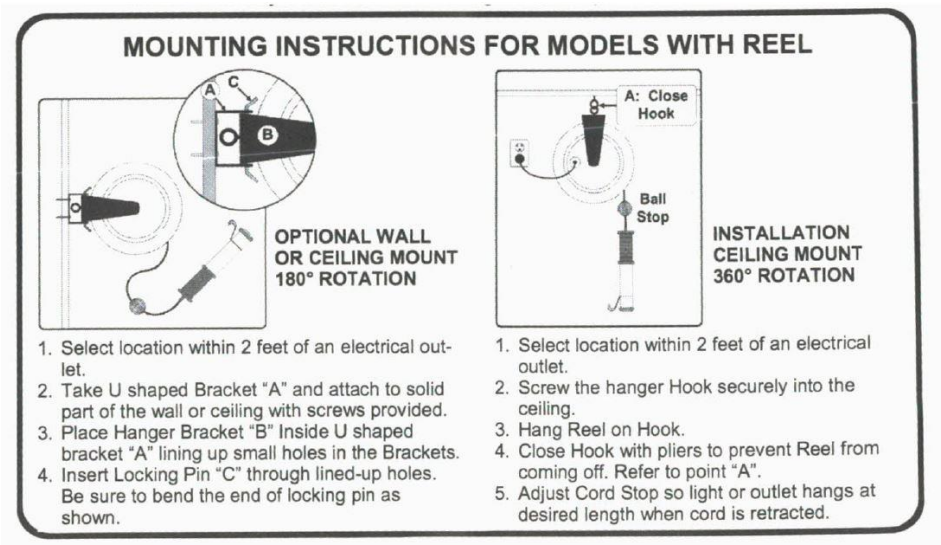

OPERATION & MAINTENANCE

1. Plug the unit into a 12 volt AC outlet. The power supply cord is UL listed and meets OSHA standards.
2. Disconnect the power supply (unplug) before servicing the light.
3. Keep the unit free from grease and dirt by using a damp cloth with mild detergent, or waterless hand cleaners. This removes dirt from scratches in outer tube and will provide the best output at all times. If tube is damaged or badly scratched, it is easily replaced and is available as a replacement part.
4. Do not use solvents such as gasoline to clean unit or cord as it makes the parts brittle. Do not allow brake fluid to contact outer tube as it will cause permanent damage.

RELAMPING INSTRUCTIONS

LARSON ELECTRONICS LLC • 9419 E US HWY 175 • KEMP, TX 75143
p: 1-800-369-6671 • intl: 903-498-3363 • f: 903-498-3364 • sales@larsonelectronics.com

1. Disconnect the power supply (unplug) before servicing the light.
2. Slide cord endcap down the cord.
3. Remove screws and slide outer tube assembly off of light fixture.
4. Pull lamp out of socket and replace.
5. Reverse 1-3. Relamping process complete.

CAUTION: IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use an extension cord unless plug can be fully inserted. Do not alter the plug.

UNIVERSAL POWER SUPPLY

CAUTION

1. Read this instruction manual before install or use.
2. Not for use in hazardous atmospheres: This power supply is not rated for use in areas requiring explosion proof fixtures.
3. Electric shock hazard: Do not open enclosure for powered or unpowered troubleshooting. High voltages are present. Unplug unit from power and wait 10 minutes before opening enclosure when installing new power supply module.
4. Unit may be used to power explosion proof lights if power supply is located outside explosive atmosphere.
5. Do not submerge in liquids.

FEATURES

1. The power supply can operate a variety of 12 volt DC lights.
2. The case is manufactured from an electrically non-conducting material for safety and is rated as a NEMA 4 (watertite) enclosure.
3. This power supply is fuse protected.
4. Since this power supply is constructed as a solid state device, it has the ability to compensate for different incoming power conditions.
    - The power supply can accommodate incoming power from 100 volts AC to 240 volts AC.
    - The power supply can accommodate incoming power frequency from 50Hz to 50Hz.
    - The power supply can accommodate a wide range of lamp wattages.

OPERATION

1. This power supply can accommodate many international voltage/frequency power standards since they fall into the power supply's input range; hence the name "Universal". To begin use of your new power supply, plug into any source meeting all of these parameters.

LARSON ELECTRONICS LLC • 9419 E US HWY 175 • KEMP, TX 75143
p: 1-800-369-6671 • intl: 903-498-3363 • f: 903-498-3364 • sales@larsonelectronics.com

- 100 – 240 Volts AC
- Single Phase
- 50 – 60 Hz

2. If your light is equipped with an on/off switch, cycle this switch to turn the light on or off.
3. If your work light fails to turn on, see "TROUBLESHOOTING" section.


TROUBLESHOOTING

A. Work light doesn't come on when power supply is plugged in:

1. Make sure power supply is plugged into a live power source meeting the parameters specified in the "Operation" section.
2. Check for an on/off switch on light head. If equipped with one, then cycle the switch.
3. Check if power cord or light cord is damaged – inspect cords for cut or broken conductors. Replace cord(s) if necessary.
4. Lamp inside light head may have failed – consult your light head instruction manual for relamping information.
5. No check of the fuse is necessary. While the power supply circuit is fuse protected, the fuse cannot be visually checked for failure; furthermore, the fuse is not a field replaceable fuse. There are no user serviceable parts on power supply module.

ELECTRIC SHOCK HAZARD: DO NOT OPEN ENCLOSURE FOR PWOERED OR UNPOWERED TROUBLESHOOTING. HIGH VOLTAGES ARE PRESENT.

B. If problems persist, or you encounter other problems contact customer service.

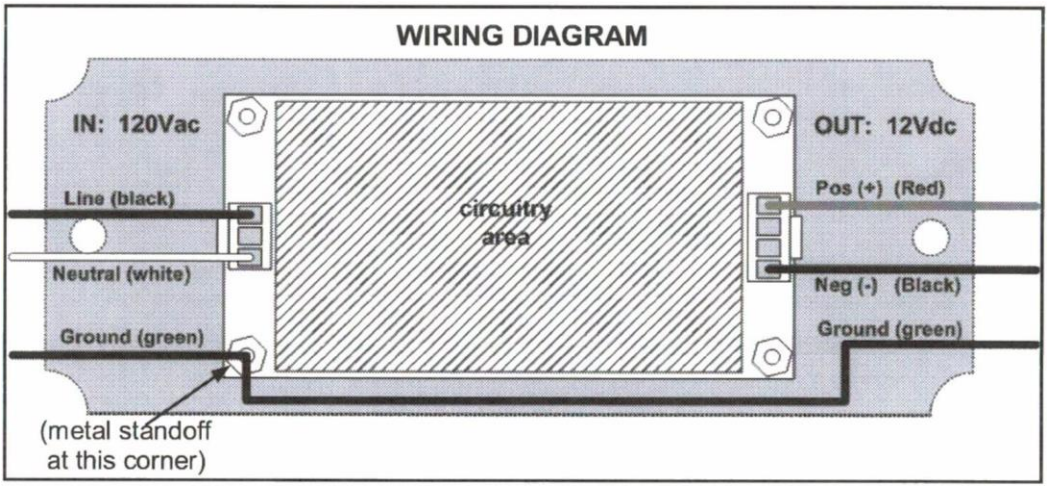

LARSON ELECTRONICS LLC • 9419 E US HWY 175 • KEMP, TX 75143
p: 1-800-369-6671 • intl: 903-498-3363 • f: 903-498-3364 • sales@larsonelectronics.com