Replacement Lens Cover for the HALP-24 Series Hazardous Location Fixture Instruction Manual

Do not attempt installation until you are familiar with all warnings and procedures outlined within this instruction sheet. These instructions are compatible for both 2ft and 4ft models.

WARNING:

RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. CRITICAL SAFETY INSTRUCTIONS:

- TO PREVENT RISK OF ELECTRICAL SHOCK DEACTIVATE/DISCONNECT POWER SUPPLY BEFORE
- PERFORMING MAINTENANCE.
- TO REDUCE RISK OF FIRE OR EXPLOSION, DO NOT OPEN FIXTURE LENS FRAME WHEN
- DO NOT INSTALL WHERE THE MARKED OPERATING TEMPERATURE EXCEEDS THE IGNITION TEMPERATURE OF THE HAZARDOUS ATMOSPHERE(S).
- THIS FIXTURE SHOULD BE MAINTAINED BY QUALIFIED TECHNICIANS IN STRICT ACCORDANCE WITH
- THE NATIONAL ELECTRICAL CODE (NEC) AND ANY STATE OR LOCAL REQUIREMENTS.

INSTALLATION


We recommend a licensed electrician install and maintain this product.
Make sure power is disconnected prior to installation.

Caution: Fixture can be HOT! Allow fixture to cool before handling.

Mount following the steps below:

1. Open draw latches holding fixture lens. There are 4 latches (4ft model) on each side and 2 latches (2ft model) on each side. Simply lift each latch to free it and unlatch from lens. Keep hold of lens and remove once free from draw latches.

2. Replace lens and close latches to secure. Place each latch into slots on the lens housing and clip in place.

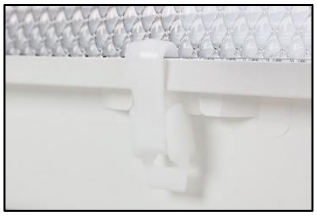

PLASTIC LATCH



STAINLESS STEEL LATCH

USE AND CARE

Always check damaged or worn out parts before using the light fixture. Broken parts will affect operation.

Should further information not covered by these instructions be required, please contact Larson Electronics at 1-800-369-6671 or sales@larsonelectronics.com for further assistance.

Please visit LarsonElectronics.com for **Warranty** and **Return** information.