
Wiring Diagram

WARNING: *DO NOT SERVICE WHILE ENERGIZED!*

MT-CTX-480V-150VA-120V

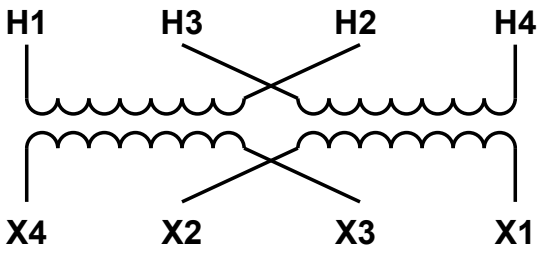

Primary Volts	Connect Lines To	Interconnect
480	H1-H4	H3-H2

Secondary Volts	Connect Lines To	Interconnect
120	X1-X4	X2-X4, X3-X1

LARSON ELECTRONICS LLC • 9419 E US HWY 175 • KEMP, TX 75143
p: 1-800-369-6671 • intl: 903-498-3363 • f: 903-498-3364 • sales@larsonelectronics.com