
Wiring Diagram

WARNING: *DO NOT SERVICE WHILE ENERGIZED!*

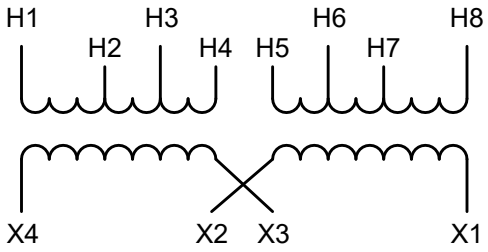

Primary Volts	Connect Lines To	Inter-connect
277	H1-H8	H4-H5
240	H1-H8	H3-H6
208	H1-H8	H2-H7
120	H1-H8	H1-H6, H3-H8

Secondary Volts	Connect Lines To	Inter-connect
240	X1-X4	X2-X3
120/240	X1-X3-X4	X2-X3
120	X1-X4	X1-X3, X2-X4

LARSON ELECTRONICS LLC • 9419 E US HWY 175 • KEMP, TX 75143
p: 1-800-369-6671 • intl: 903-498-3363 • f: 903-498-3364 • sales@larsonelectronics.com