HALP-4824-xL-WLM
Adjustable Flat Surface Aluminum Mounting Brackets

WARNING
To avoid electric shock:
- Be certain electrical power is OFF before and during installation and maintenance of installed light fixtures.
- If you are uncertain of any terms in this manual, consult an electrician.

INSTALLATION
Turn off power supply. Allow the fixture to cool. Remove and prepare fixture for maintenance.

These brackets attach to existing surface brackets on light fixture. Measure and plan a way to secure the mounts to your surface. In some instances, it is easier to attach each adjustable mount to your surface first, and then attach the light.

With bolts, attach each bracket to existing surface mounts on light fixture. To adjust the mount, loosen the adjustment bolts and pivot to desired angle. Tighten bolts to secure light in its place.

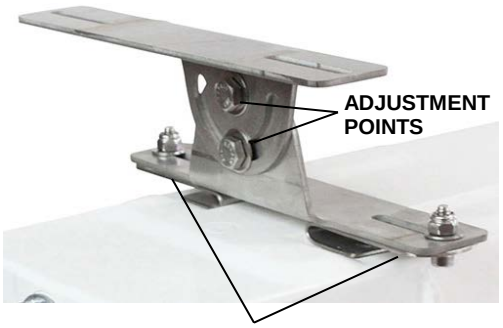

CAUTION: *Ensure light fixture is secure before operating!*

MAINTENANCE

CAUTION: To avoid personal injury, disconnect power to the light and allow the unit to cool down before performing maintenance.

Perform visual, mechanical and electrical inspections on a regular basis. We recommend routine checks to be made on a yearly basis. Frequency of use and environment should determine this. It is recommended to follow an Electrical Preventive Maintenance Program as described in NFPA 70B: Recommended practice for Electrical Equipment.

WARRANTY
Should further information not covered by these instructions be required, please contact Larson Electronics at 1-800-369-6671 or sales@larsonelectronics.com for further assistance.

Please visit LarsonElectronics.com for **Warranty** and **Return** information.