10 Watt LED Vapor Proof Droplight / Handlamp
Instruction Manual

Do not attempt operation until you are familiar with all warnings, precautions, and procedures outlined within this instruction sheet. Read carefully before operating. Retain these instructions for future reference.

WARNING:

- KEEP LIGHTED LAMP AWAY FROM COMBUSTIBLES.
- DO NOT TOUCH HOT LENS GUARD OR ENCLOSURE.
- DO NOT LOOK DIRECTLY AT LIGHTED LAMP.
- DO NOT USE IF LENS GLOBE IS CRACKED OR DAMAGED.
- USER SHOULD BE TRAINED IN THE PROPER USE AND MAINTENANCE OF THIS DEVICE.

USING THE HAND LAMP



This hand lamp comes preconfigured with user selected cord cap. Follow the steps below to operate the unit.

1. Position light head in desired location using stainless steel swivel hook.
2. Run cable and attach power cord to compatible outlet with output **voltage listed on product label.**

WARNING: *This hand lamp operates on selected voltage. Check product label for correct voltage! Damage from improper voltage may not be covered by warranty.*

OPERATION

The LED lamp in the hand lamp is “instant-on” and will illuminate once power is supplied.

LAMP REPLACEMENT

1. Loosen (4) set screws holding Globe Guard.
2. Remove Globe Guard assembly from handle.
3. Unscrew Globe from handle.
4. Replace with compatible 10 watt LED lamp.
5. Screw Globe completely onto lamp base.
6. Replace Globe Guard.
7. Tighten (4) set screws securely.

Note: Over tightening can deform threads.

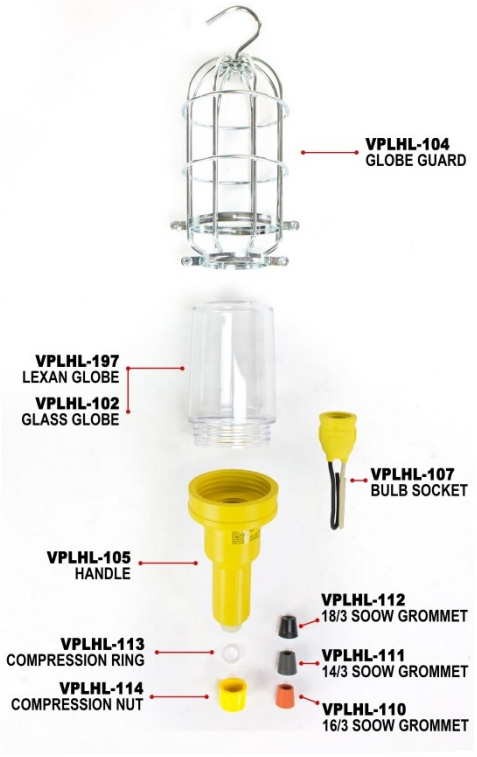

GROUND-FAULT CIRCUIT INTERRUPTER

In the event of a ground fault, a GFCI will trip and quickly stop the flow of electricity to prevent serious injury.

Definition of a ground fault:
Instead of following its normal safe path, electricity passes through a person's body to reach the ground. For example, a defective appliance can cause a ground fault.

A GFCI receptacle does **NOT** protect against circuit overloads, short circuits, or shocks. For example, you can still be shocked if you touch bare wires while standing on a non-conducting surface, such as a wood floor.

NOTE:
GFCI's contain a lockout feature that will prevent RESET if:
• There is no power being supplied to the GFCI.
• The GFCI is miswired due to reversal of the LINE and LOAD leads.
• The GFCI cannot pass its internal test, indicating that it may not be able to provide protection in the event of a ground fault.

GFCI TEST

Use an approved GFCI tester or plug an electrical device, such as a lamp into the receptacle on which you are working. Turn the lamp or device ON. Then, press the TEST button on the GFCI box and power should immediately be switched off. If not, contact an electrician. Press the RESET button to restore power.

USE AND CARE

Unauthorized modification may impair the function and/or safety of the work light and could affect the life of the equipment. Always check damaged or worn out parts before using the work light. When work light is not in use, store it in a secure place out of the reach of children. Inspect for good working condition prior to storage and before re-use.

REPLACEMENT PARTS

The VPLHL-7WLED-PC-XGFI is designed to provide years of reliable lighting performance. Should the need for replacement parts arise, please contact Larson Electronics at the contact information below.

Should further information not covered by these instructions be required, please contact Larson Electronics at 1-800-369-6671 or sales@larsonelectronics.com for further assistance.

Please visit LarsonElectronics.com for **Warranty** and **Return** information.