
Wiring Diagram

WARNING: *DO NOT SERVICE WHILE ENERGIZED! Do not back feed!*

MT-SLX-3P.1P-208Y-25KVA-120.240V-N3R

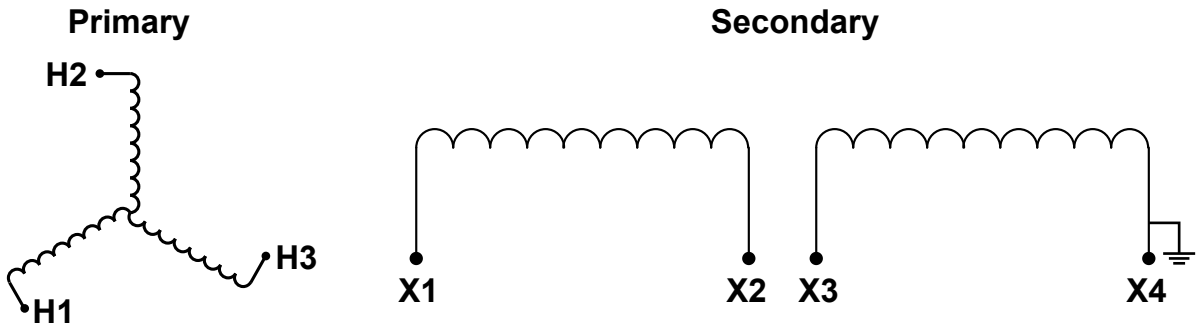

Primary volts = 208V
Connect lines to = H1, H2, H3

Secondary volts = 240V
Connect lines to = X1, X4
Innerconnect lines to = X2, X3

Secondary volts = 120/240V
Connect lines to = X1, X4
Innerconnect lines to = X2 to X3

Secondary volts = 120V
Connect lines to = X1, X4
Innerconnect lines to = X1 to X3, X2 to X4

LARSON ELECTRONICS LLC • 9419 E US HWY 175 • KEMP, TX 75143
p: 1-800-369-6671 • intl: 903-498-3363 • f: 903-498-3364 • sales@larsonelectronics.com