

SPORTS VISOR
INSTALLATION INSTRUCTIONS

H.I.D OUTDOOR SPORTS FLOOD SERIES FIXTURES
HIGH PRESSURE SODIUM, METAL HALIDE AND MERCURY VAPOR

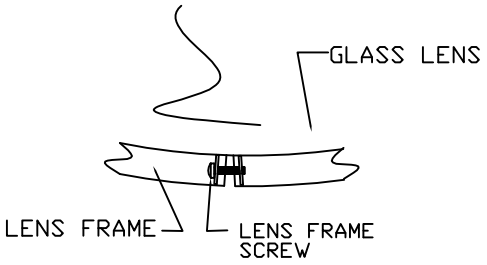

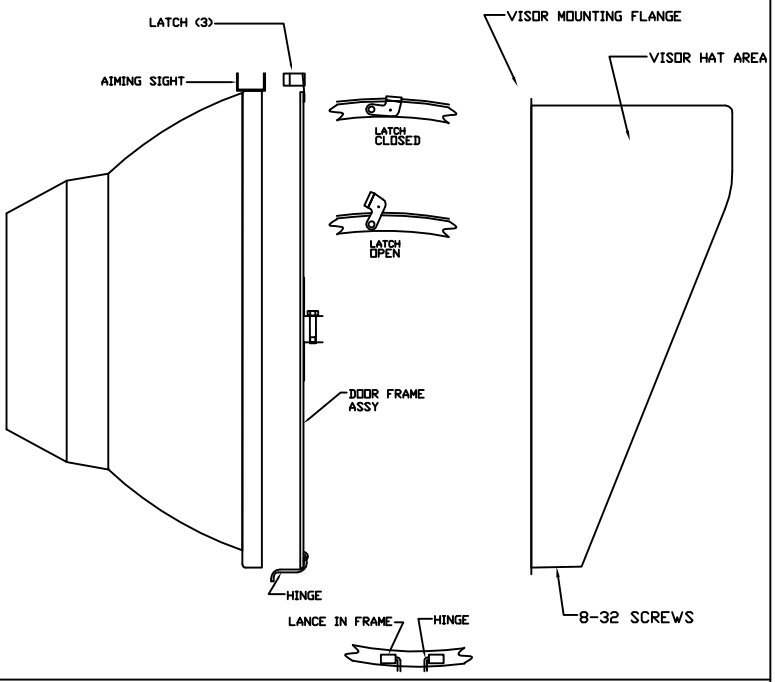


MOUTNING REFLECTOR (Before Aiming)

Align keyhole slots in neck of Reflector with mounting screws in Socket Housing (FIG. 1). Slip Reflector over mounting screws. Rotate Reflector until screws bottom out in slots. Make sure that keyhole slots have been fully rotated to engage screw heads in narrow portion of keyholes. Tighten (4) screws to 25-30 in. lbs.

MOUTNING VISOR (Before Aiming)

Loosen lens frame screw. Slip visor flange between lens frame and glass. Spin visor so that the hat part is at the top. Tighten the lens frame screw. Install the (2) 8-32 screws and nuts provided in the kit thru the overlapping slots located at the bottom of visor.

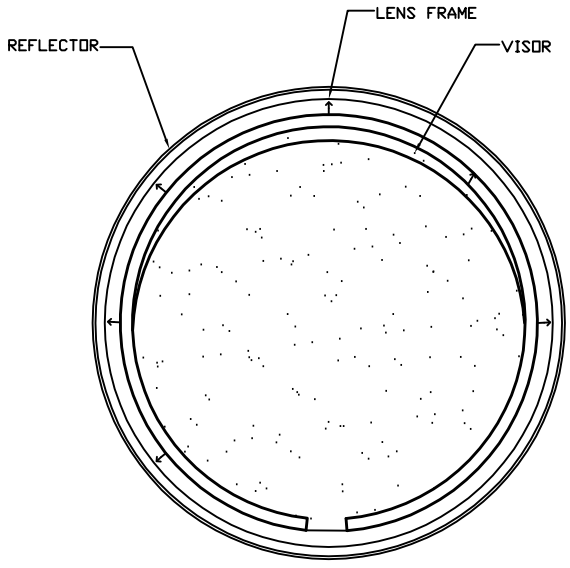

DWG#FL-032006 DRAWN BY: T VILES