

Electric Automatic Hand Sanitizer Dispenser

Battery Powered - Infrared Sensor, 1000mL Capacity - Universal Refillable

Instruction Manual

Thank you for your purchase of the Larson Electronics XLE-MD-DF-AD-HS-120V.

WARNING:

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. CRITICAL SAFETY INSTRUCTIONS:

- INSTALLATION SHOULD ONLY BE CONDUCTED BY A QUALIFIED ELECTRICIAN IN ACCORDANCE WITH NEC AND ANY RELEVANT LOCAL BUILDING CODES.
- RISK OF FIRE OR ELECTRIC SHOCK. FIXTURE INSTALLATION REQUIRES KNOWLEDGE OF LUMINAIRES ELECTRICAL SYSTEMS. IF NOT QUALIFIED, CONTACT A QUALIFIED ELECTRICIAN.
- BE CERTAIN ELECTRICAL POWER IS OFF BEFORE AND DURING INSTALLATION AND MAINTENANCE.
- MAKE SURE THE SUPPLY VOLTAGE IS THE SAME AS THE RATED LUMINAIRE FIXTURES VOLTAGE.
- TO PREVENT WIRING DAMAGE OR ABRASION, DO NOT EXPOSE WIRING TO EDGES OF SHEET METAL OR SHARP OBJECTS. SUITABLE FOR DAMP LOCATIONS.

Infrared Warning

INFRARED LIGHT MAY CAUSE DAMAGE TO EYES IN VERY INTENSE CONCENTRATIONS.
RISK OF EYE DAMAGE AT SHORT DISTANCES. TURN LIGHT SOURCE OFF BEFORE SERVICING.

The XLE-MD-DF-AD-HS-BP from Larson Electronics is an Electric Automatic Hand Sanitizer Dispenser for no-contact hand disinfection. This unit utilizes an infrared sensor to detect movement when dispensing sanitizer. Equipped with a universal refillable compartment for non-proprietary liquids, the device operates on (4) C batteries and can be mounted on walls. **BATTERIES NOT INCLUDED.**

MOUNTING


The automatic hand sanitizer dispenser is suitable for wall mounting applications.

INSTALLATION

When mounting and installing unit, make sure to keep at least 40 cm of free space below the unit.

1. Unlock and open the front cover, and remove the soap tank. (Pic A-1,2)
2. Make drilling marks and drill holes on the unit. Then insert the plastic plugs. (Pic A-3,4)
3. Fixate the dispenser onto the wall with screws. (Pic A-5)
4. Slide the lid of the battery box and load in four (4) C size batteries. (Pic A-6)
- a. **Batteries are not included with unit.***
5. Insert the soap tank back into the unit. (Pic A-7)
6. Fill the soap tank with desired liquid. (Pic A-8)

Refer to pictures below for installation visuals.

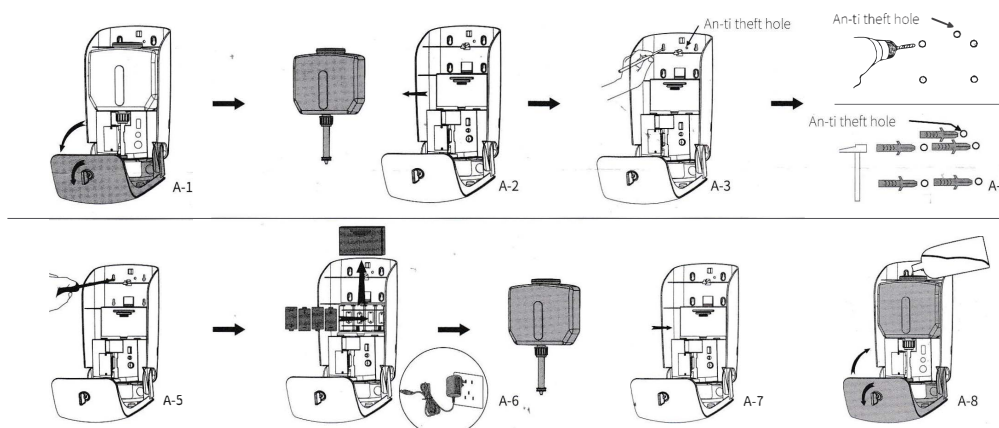

OPERATION

1. Insert four (4) C Size batteries.
2. Fill soap tank with proper liquid according to the unit type. Do not overfill unit.
3. Slide the switch to the ON position to turn on the power.
 - a. Power switch is located behind the front cover under the soap tank.
4. Prime the dispenser by inducing several times to force out the air in the dispenser before first using.
5. Place hands underneath unit within the sensor area to activate the dispenser until the liquid comes out.
6. A low battery indicator will flash a Red LED light frequently when batteries need to be replaced.

MAINTENANCE

1. Unit is meant for indoor use only and to be placed in a cool environment. Avoid placing in direct sunlight or heat.
2. Use a dry towel to clean the outside of the unit.
3. This product is not waterproof. DO NOT install in high humidity locations.

USE AND CARE

Unauthorized modification may impair the function and/or safety of this device and could affect the life of the equipment. Always check for damaged or worn out parts before using the device. Store it in a secure place out of the reach of children when not in use. Inspect for good working condition prior to storage and before re-use.

REPLACEMENT PARTS

The XLE-MD-DF-AD-HS-BP is designed to provide years of reliable performance. Should the need for replacement parts arise, please contact Larson Electronics.

THESE INSTRUCTIONS MAY NOT COVER ALL DETAILS OR VARIATIONS OF THIS PRODUCT FOR YOUR EQUIPMENT OR INSTALLATION REQUIREMENTS. SHOULD FURTHER INFORMATION NOT COVERED BY THESE INSTRUCTIONS BE REQUIRED, PLEASE CONTACT LARSON ELECTRONICS BY EMAIL AT SALES@LARSONELECTRONICS.COM OR BY PHONE AT 1-800-369-6671 FOR FURTHER ASSISTANCE.

PLEASE VISIT LARSONELECTRONICS.COM FOR **WARRANTY** AND **RETURN** INFORMATION.