


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-DOE16-1P-230.460V-30KVA-115.230V-N3R

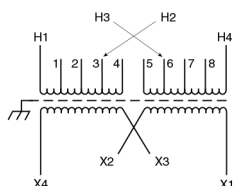

Primary Volts	Connect Primary Lines To	Inter-Connect	Connect Secondary Lines To
216	H1-H4	H1, H3, 8 & H2, H4, 1	
230	H1-H4	H1, H3, 7 & H2, H4, 2	
240	H1-H4	H1, H3, 6 & H2, H4, 3	
252	H1-H4	H1, H3, 5 & H2, H4, 4	
432	H1-H4	H2, 1 & H3, 8	
444	H1-H4	H2, 2 & H3, 8	
456	H1-H4	H2, 2 & H3, 7	
460	H1-H4	H2, 3 & H3, 7	
480	H1-H4	H2, 3 & H3, 6	
492	H1-H4	H2, 4 & H3, 6	
504	H1-H4	H2, 4 & H3, 5	
Secondary Volts			
230		X2 to X3	X1-X4
115/230		X2 to X3	X1-X2-X4
115		X1 to X3 X2 to X4	X1-X4